



Print 1 solid color PMS 676 C

Lifeguard Play Set™


Megaphone Instructions

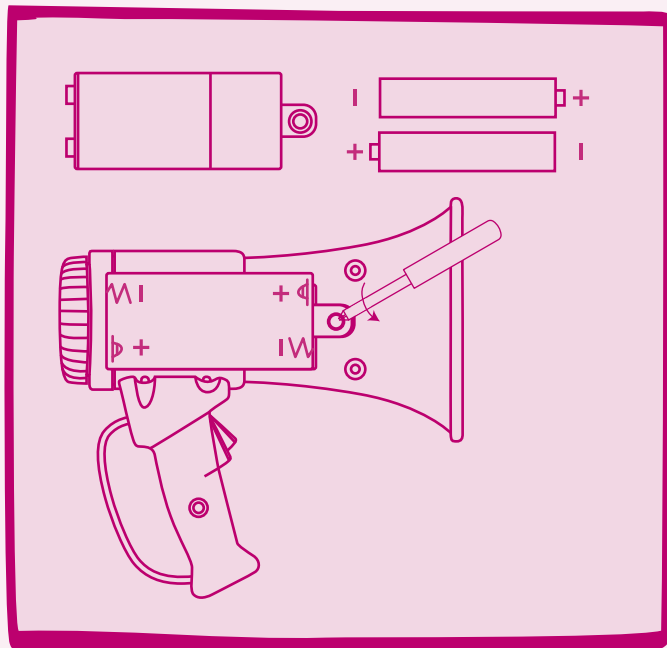

1. Open the battery cover with a philips screwdriver.
(not included)

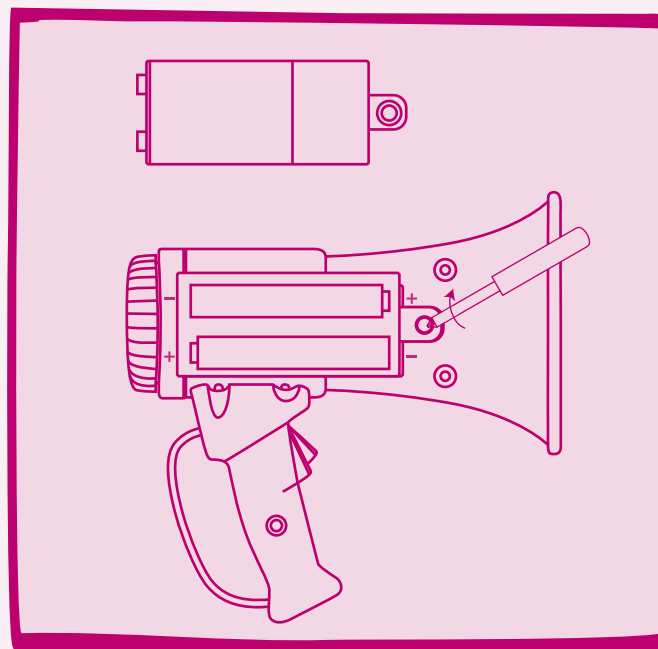

2. Install 2 x AAA batteries and follow the polarity orientation,
as shown. Close the battery cover with screwdriver.

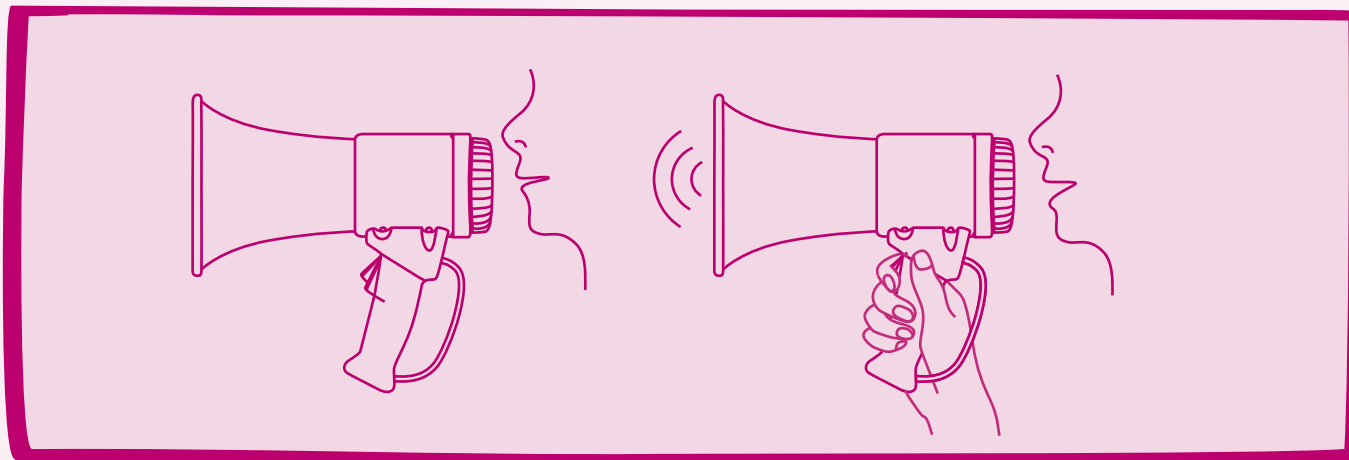

3. Press button and speak to make sound louder.

CAUTION:

Uses 2 x AAA (1.5V) size batteries – Included
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc),
or rechargeable (nickel-cadmium) batteries.
Do not dispose of this product in fire.
Batteries inside product may explode or leak.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference,
and (2) this device must accept any interference
received, including interference that may cause
undesired operation.

Caution: changes or modifications not expressly
approved by the party responsible for compliance
could void the user's authority to operate the
equipment.

NOTE: This equipment has been tested and found to
comply with the limits for a Class B digital device,
pursuant to Part 15 of the FCC Rules. These limits are
designed to provide reasonable protection against
harmful interference in a residential installation. This
equipment generates, uses and can radiate radio
frequency energy and,
if not installed and used in accordance with the
instructions, may cause harmful interference to radio
communications. However, there is no guarantee
that interference will not occur in a particular
installation. If this equipment does cause harmful
interference to radio or television reception, which
can be determined by turning the equipment off and
on, the user is encouraged to try to correct the
interference by one or more of the following
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
and receiver.
- Connect the equipment into an outlet on a circuit
different from that to which the receiver is connect-
ed.
- Consult the dealer or an experienced radio/TV
technician for help.

age
3+



WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

BD37416

Size A4: 11.69" x 8.27"